 


# Instruction Manual

HDMI,Ypbpr,AV,VGA  
(Recording,Pre-recording,playback)

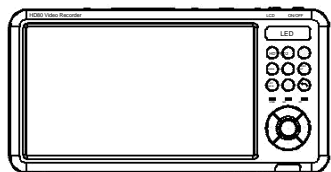

 
# BOX CONTENTS




A




B

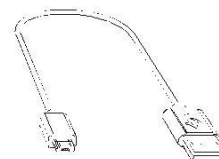

C

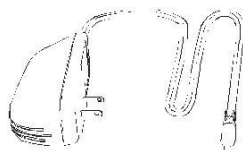 


G

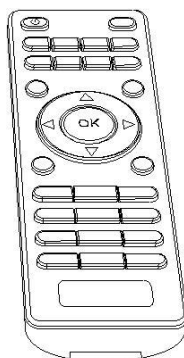 

E



 F

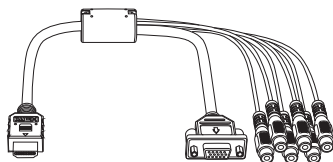

H

A. 7inch capture box

B. HDMI CABLE

G. Power 12v1.5a

C. USB CABLE TO PC

F.USER'S MANUAL

H. MMI Cable(VGA,YPBPR,AV)





E.REMOTE CONTROL



# SUPPORTED RESOLUTIONS

       
 
 
Input	4K*2K(3840x2160 30p) 1920x1080 (50p), 1920x1080 (60p), 1920x1080 (24p) 1920x1080 (25p), 1920x1080 (30p), 1920x1080 (50i) 1920x1080 (60i), 1360x768 (60p) 1280x1024 (60p), 1280x720 (60p), 1280x768 (60p) 1280x800 (60p), 1024x768 (60p) 720x480 (60i), 720x480 (50i), 640x480 (60p) 720x480 (60p), 720x576 (50p)
Output	1920x1080 (60p)
Recording	1920x1080 (60p) 1280x720 (60p) 1024x768 (60p) 1280x1024 (60p) YUV420,YUV422,YUV444,RGB444
PC Recording	1920x1080 (60p)

# PRODUCT SPECIFICATIONS

Output format	MP4 (H.264)
Video standards (input)	NTSC, PAL, PAL-60
Supported recording formats	FAT32 NTFS exfat.MBR.GPT
Input signals	HDMI, VGA, YPbPr, AV Audio L/R,MIC,Line In/Out
Output signals	HDMI (pass-through), USB, Micro USB to PC
Bitrate	Max: 18Mbps
Recording capacity	Maximum 4GB/16GB per file
Maximum storage capacity	8TB
Power supply	DC 12V1A
Weight	7.1 oz
Dimensions	4.3 x 4.3 x 0.6 inches
Supported file formats for playback	<b>Image formats:</b> JPG <b>Audio formats:</b> AAC <b>Video formats:</b> MP4 HDMI in Audio Sampling Rate:48Khz/44.1KHz/32Khz  <b>NOTE: Videos can be played back normally only when the image format, audio format and video format of a video meet the above requirements simultaneously.</b>

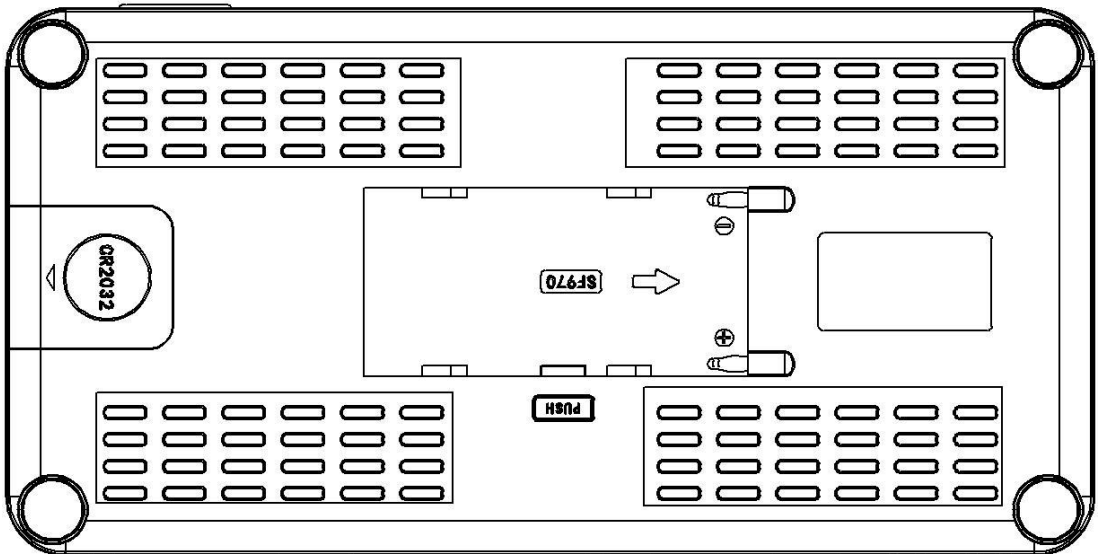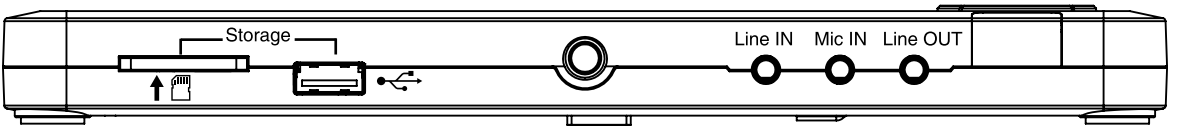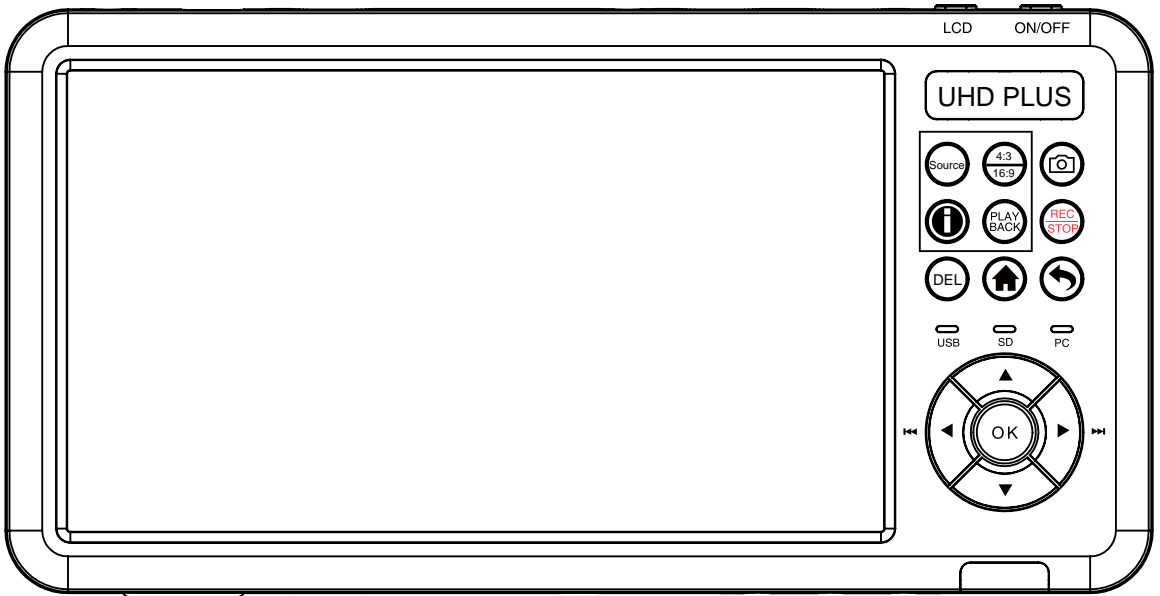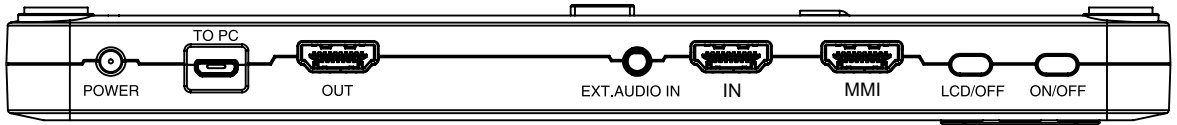

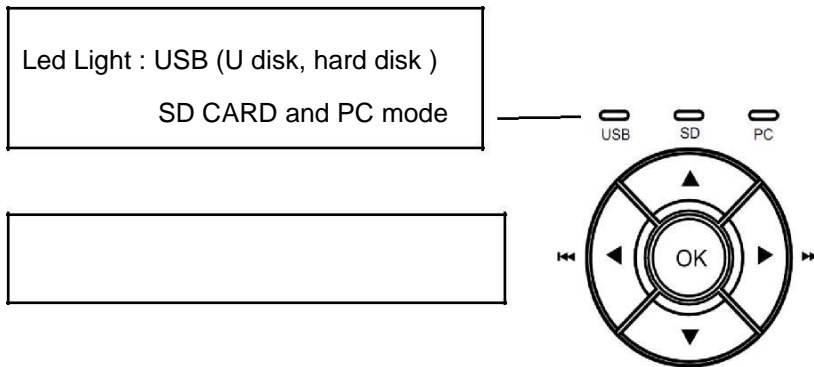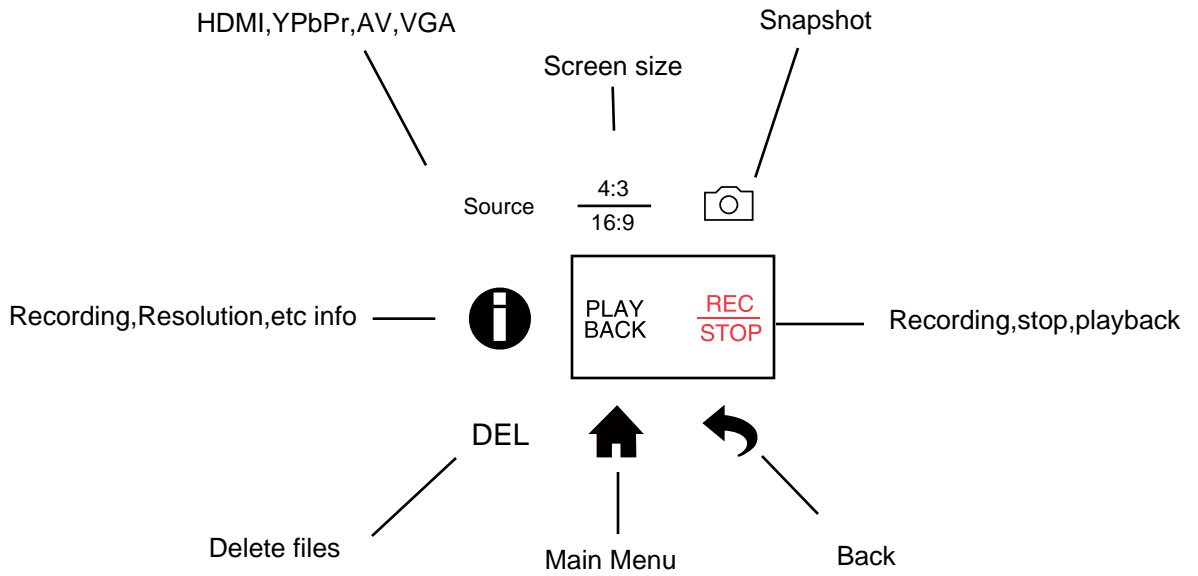

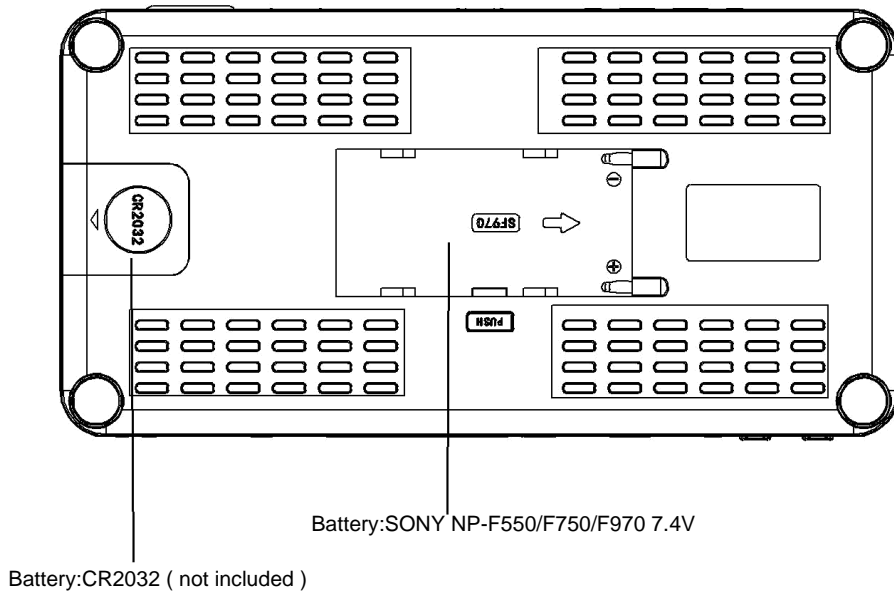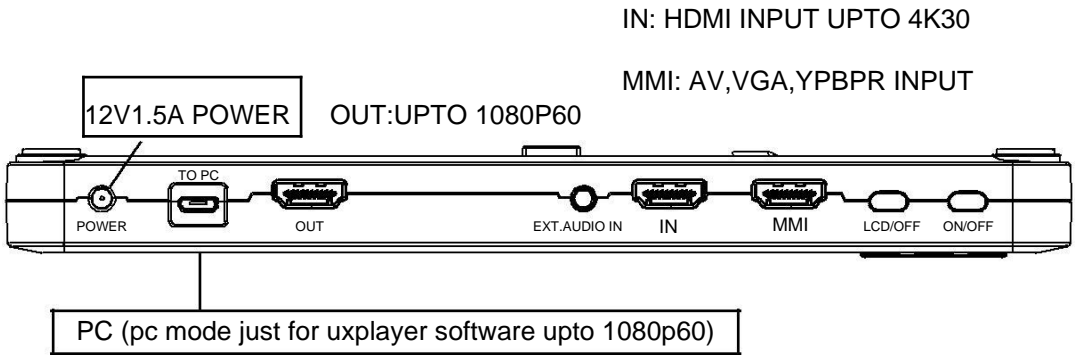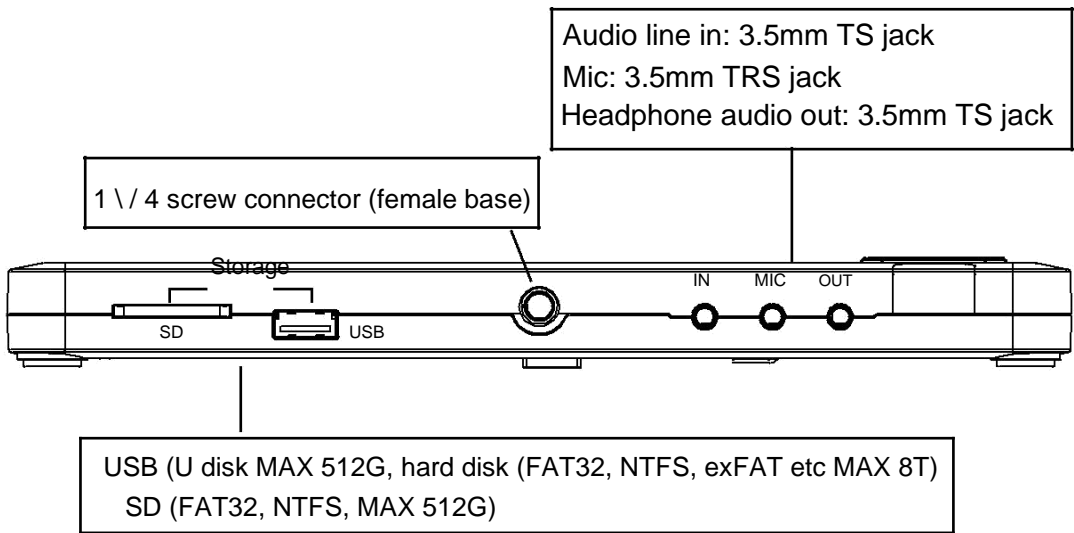

REC

STOP

VIDEO SOURCE

HDMI

VGA

YPbPr

AV

Speaker icon with X

4:3

16:9

Microphone icon with X

Info icon

Microphone +

Camera icon

OK

Navigation pad with directional arrows and volume controls

Home icon

Microphone -

Return icon

TIME

PLAYBACK

SCHEDULE

RECORDING

Fast Forward icon

Play/Pause icon

Stop icon

Fast Reverse icon

DELETE

 
Fast Forward icon

-

+





Mute

Speaker









# SYSTEM SETTING

System Setting    

language	< English >
Record Resolution	< 1920x1080 >
Record fps	< 60Hz >
Bitrate	< High >
File size	< 16G >
Loop Recording	< On >
Show REC	< On >
Time Watermark	< On >
System time	< 2021-03-11 10:41 >

  Change       Choose       Close





# SYSTEM SETTING

Language: English, Simplified Chinese, Chinese, Japanese, Korean, German, French, etc.

Record Resolution: 1920x1080/1024X768/1280X720/1280X1024

Record fps: 50/60Hz

Bitrate: High/Med/Low

File Size: 16G/4G

Loop Recording: On/off





Show REC: On/off (Show logo REC)

Time watermark: On/off





System Time: 2021-XX-XX XX:XX



# Image Setting

Image Setting    

Brightness	<	75	>
Contrast	<	75	>
Saturation	<	50	>
Backlight	<	90	>
Update	<		>
Restore	<		>
Version	<	20210215	>

  Change       Choose       Close



# Image Setting

Brightness : 0-100

Contrast : 0-100

Saturation : 0-100

Backlight : 0-100

Update :

Restore :

Version : 20210215



# Audio Setting

The screenshot shows an audio settings menu with a dark background and light-colored text and icons. At the top, there are four icons: a speaker with a gear, a volume knob with a gear, a speaker with a gear, and a calendar with a gear. Below these icons, the text "Audio Setting" is displayed. The main content consists of six rows, each representing a different audio setting. Each row has a label on the left, a left arrow (<) on the left, a numerical value or "Off" in the center, and a right arrow (>) on the right. At the bottom of the screen, there are three navigation options: "Change" (with a left arrow icon), "Choose" (with a right arrow icon), and "Close" (with a circular arrow icon).

Setting	Value
HDMI Volume	100
Mic Volume	55
Line Volume	10
Sperker Volume	100
Line out volume	100
Line out mixed	Off

Navigation options at the bottom: Change, Choose, Close.



# Audio Setting

HDMI Volume: 0-100

Mic Volume: 0-60

Line Volume: 0-10

 
Sperker Volume: 0-100

Line OUt Volume: 0-100

Line Out Mixed: on/off



# Schedule Setting

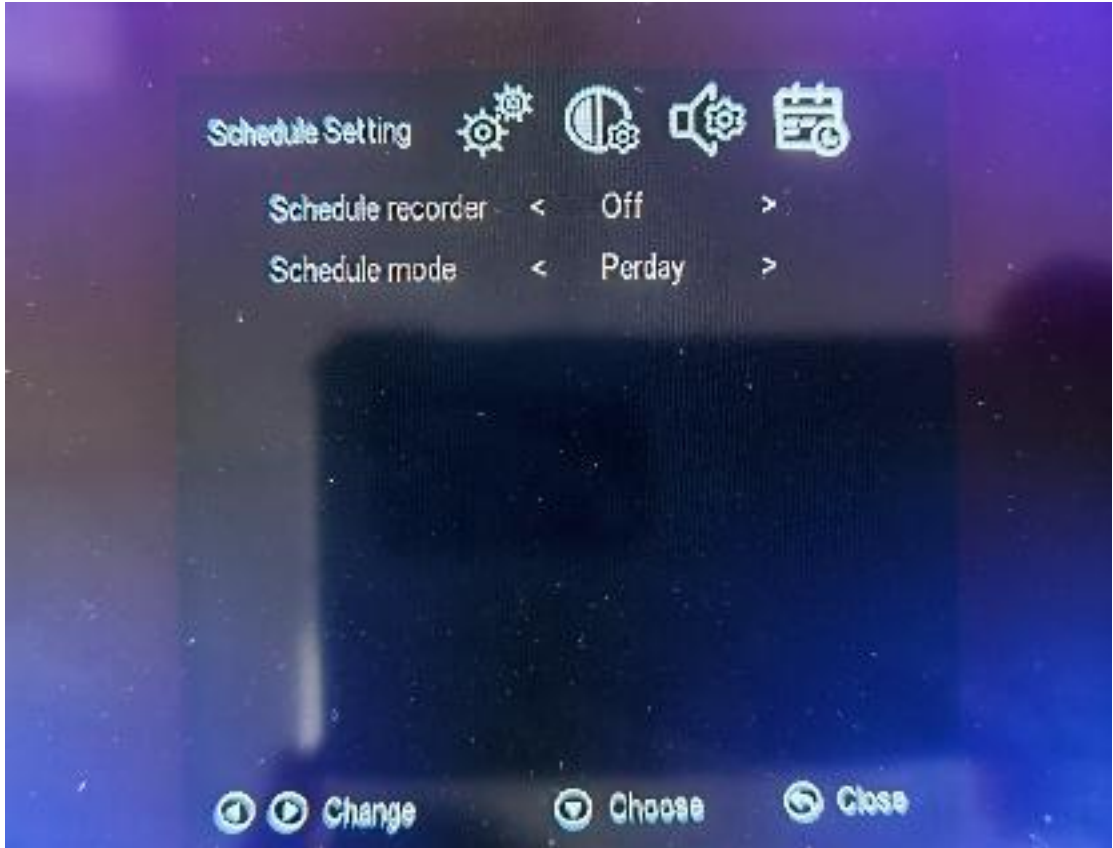

Schedule recorder : off/on

Schedule mode : Per day/once

# Schedule Setting

