 


Instruction Manual

4K CAPTURE / PIP&PMP 2CH Display
(Recording,Pre-recording,playback)

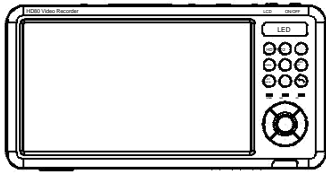

 
BOX CONTENTS




A




B

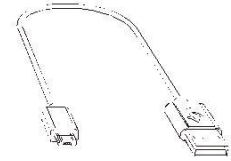

C

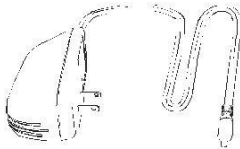 

G

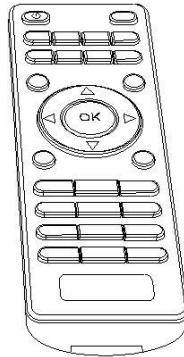 

E



F

A. 7inch capture box
B. HDMI CABLE
G. Power 12v1.5a

C. USB CABLE TO PC
F.USER'S MANUAL

E.REMOTE CONTROL

Specifications:

HD1/HD2 Video input :resolutions up to 4096 x 2160P60hz/1080P144hz/1080P120hz

Record Resolution: 1920x1080/1024X768/1280X720/1280X1024

Recrod format: MP4(H.264)

Supports: UVC & UAC USB (Flash MAX 512G, hard disk (FAT32, NTFS, exFAT etc MAX 8T)
SD (FAT32, NTFS, MAX 512G)

Supports UVC & UAC

Supports video streaming software OBS / XSplit

Sampling rate: 48kHz PCM

Compatible with Windows 10 , & Linux

Built-in audio control software (control Line in, MIC, Line Out)

Compatibility with 3rd party application software

Linux Ubuntu 14.04

OBS (Windows, Mac)

 
 
 
 
XSplit (Windows)

Wirecast (Windows, Mac)

Adobe Flash Media Live Encoder (Windows)

DirectShow (Windows)

DirectSound (Windows)

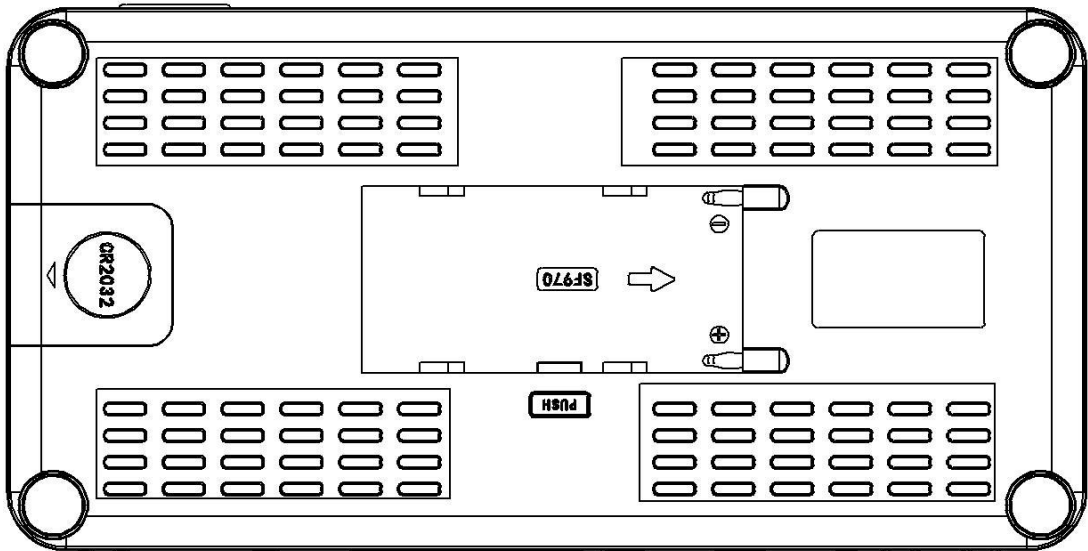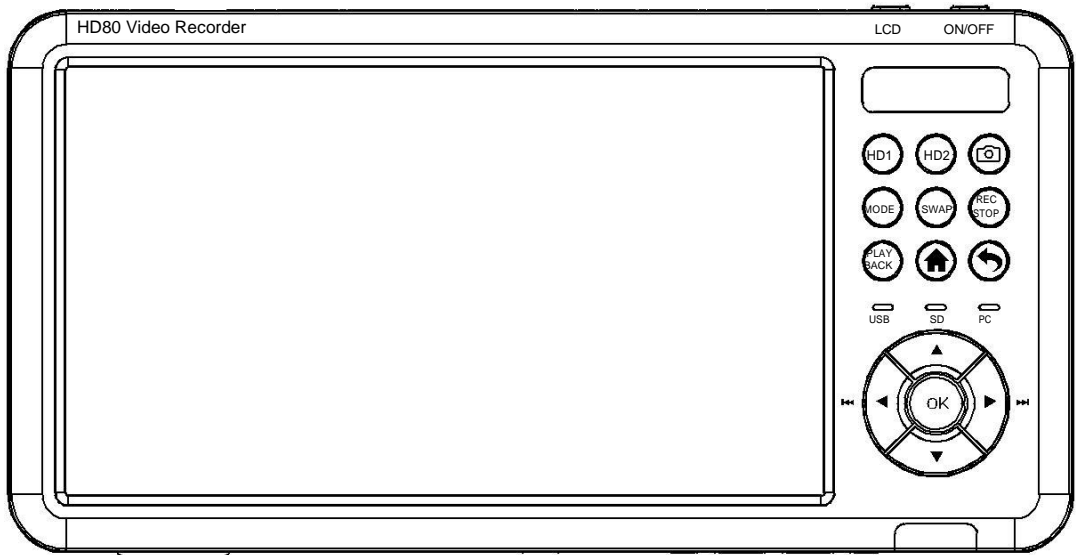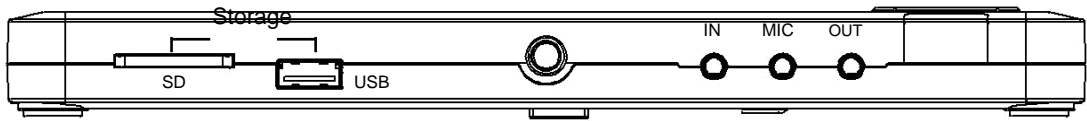




HD1 MAX:4K60HZ
1080P144HZ
1080P120HZ
HD2 MAX:4K30HZ

 
Light info:Blue 1080P60hz
Below Green 1080P60hz(720P etc)



In PIP,PMP mode:
the screen is switched to each other

Three modes
Picture in picture 
left and right 
up and down 

LED

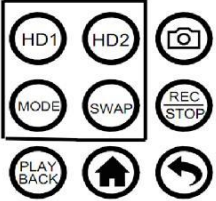




Snapshot photo (*.jpg files)
Recording video (*.MP4 files)
Stop recording video

Menu settings: Playback,Prerecorded,system time
Resolution, bit rate setting,etc

Led Light : USB (U disk, hard disk)
SD CARD and PC mode

   Up, down, left and right buttons:
Can be moving for the for the PIP mode

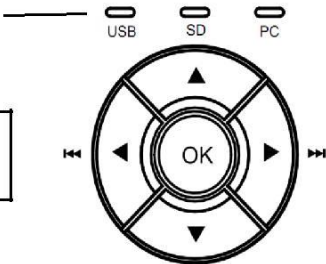

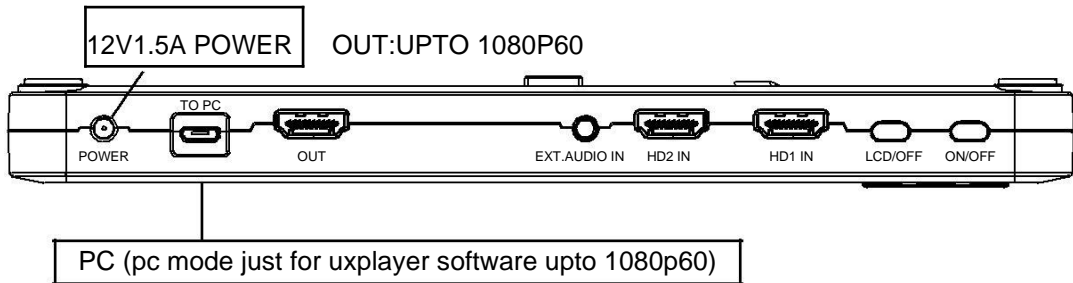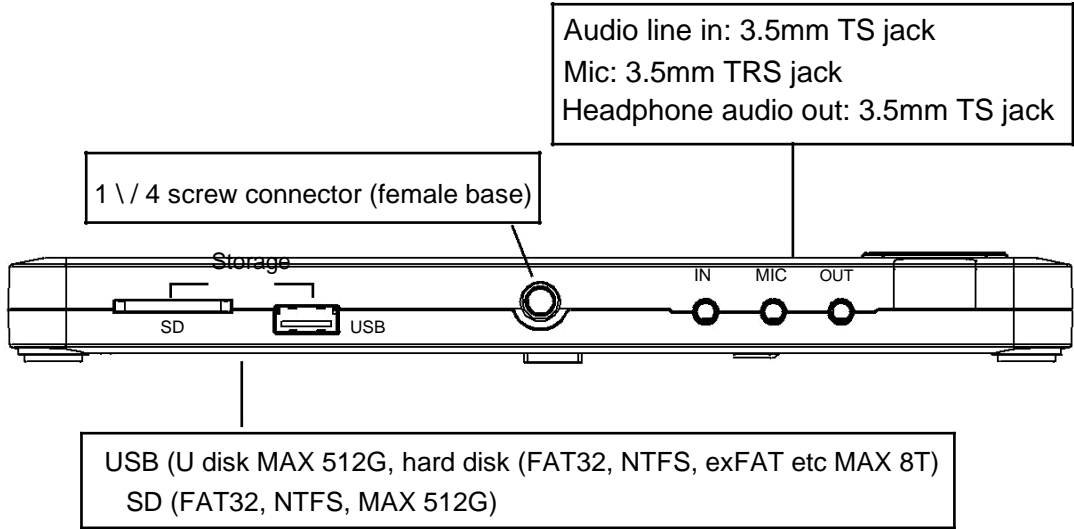


HD1 Max:4K60hz INPUT

Support:1080p144hz,1080p120hz,1080p60hz etc

HD2 Max 4K30hz INPUT

 Support:4k30hz,1080p60 etc

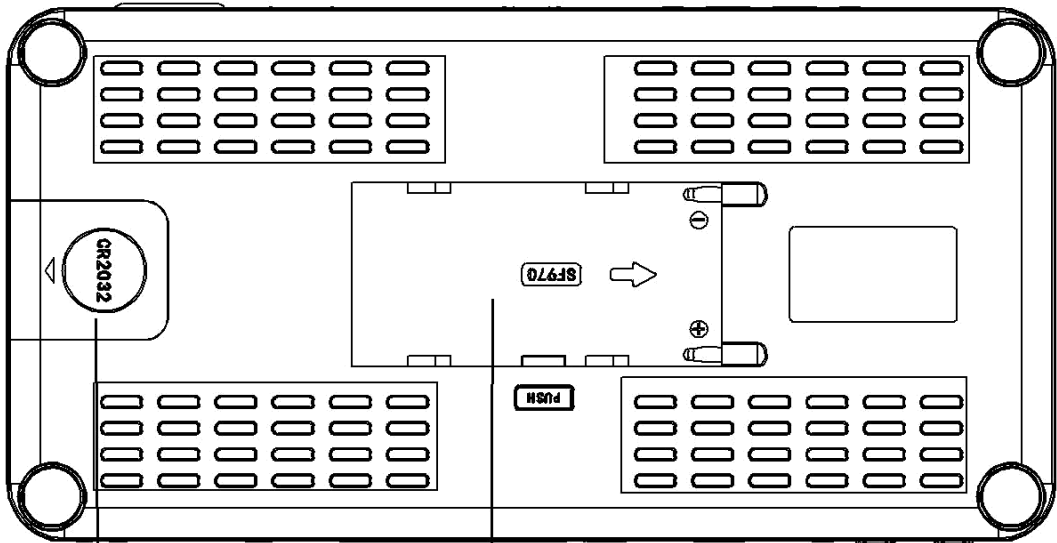





Battery:SONY NP-F550/F750/F970 7.4V





Battery:CR2032 (not included)



SYSTEM SETTING

System Setting    

| | |
|-------------------|----------------------|
| language | < English > |
| Record Resolution | < 1920x1080 > |
| Record fps | < 60Hz > |
| Bitrate | < High > |
| File size | < 16G > |
| Loop Recording | < On > |
| Show REC | < On > |
| Time Watermark | < On > |
| System time | < 2021-03-11 10:41 > |

  Change  Choose  Close



SYSTEM SETTING

Language: English, Simplified Chinese, Chinese, Japanese, Korean, German, French, etc.

Record Resolution: 1920x1080/1024X768/1280X720/1280X1024

Record fps: 50/60Hz

Bitrate: High/Med/Low

File Size: 16G/4G

Loop Recording: On/off

Show REC: On/off (Show logo REC)

Time watermark: On/off

System Time: 2021-XX-XX XX:XX



Image Setting

The screenshot shows a menu titled 'Image Setting' with several options and their corresponding values. At the top right, there are four icons: a gear, a circle with a gear, a speaker with a gear, and a calendar with a gear. The menu items are as follows:

| Option | Value |
|------------|----------|
| Brightness | 75 |
| Contrast | 75 |
| Saturation | 50 |
| Backlight | 90 |
| Update | |
| Restore | |
| Version | 20210215 |

At the bottom of the screen, there are three buttons: 'Change', 'Choose', and 'Close', each with a circular icon to its left.



Image Setting

Brightness : 0-100

Contrast : 0-100

Saturation : 0-100

Backlight : 0-100

Update :

Restore :

Version : 20210215



Audio Setting

The screenshot shows an audio settings interface with a dark background and light-colored text and icons. At the top, there are four icons: a speaker with a gear, a volume slider with a gear, a speaker with a gear, and a calendar with a gear. Below these icons, the text "Audio Setting" is displayed. The main content consists of six rows, each representing a different audio setting. Each row has a label on the left, a left arrow, a numerical value or "Off", and a right arrow. At the bottom of the screen, there are three navigation options: "Change" (with a left arrow icon), "Choose" (with a right arrow icon), and "Close" (with a circular arrow icon).

| Setting | Value |
|-----------------|-------|
| HDMI Volume | 100 |
| Mic Volume | 55 |
| Line Volume | 10 |
| Sperker Volume | 100 |
| Line out volume | 100 |
| Line out mixed | Off |

Navigation options: Change, Choose, Close



Audio Setting

HDMI Volume: 0-100

Mic Volume: 0-60

Line Volume: 0-10

 
Sperker Volume: 0-100

Line OUt Volume: 0-100

Line Out Mixed: on/off



Schedule Setting

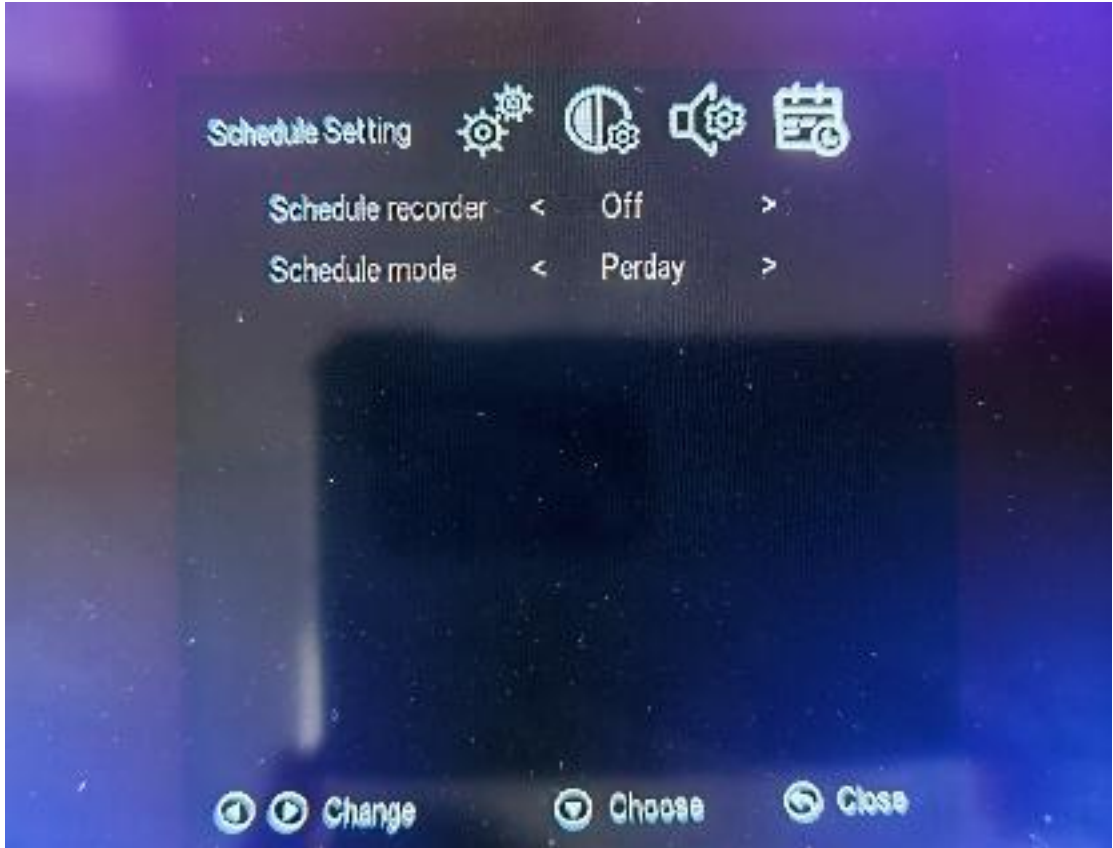

Schedule recorder : off/on

Schedule mode : Per day/once

Schedule Setting

